

Delete card

Under **Settings/Card system/Delete card** you can delete one or more cards belonging to a card account. To do this, place the card on the card reader and confirm with **Delete**.

